 







Detail of Right Hand Brake Arm Offset
Left Hand Brake Arm Opposite
Scale 1:2







Detail of -09 Brake Cable Guide
Full Scale

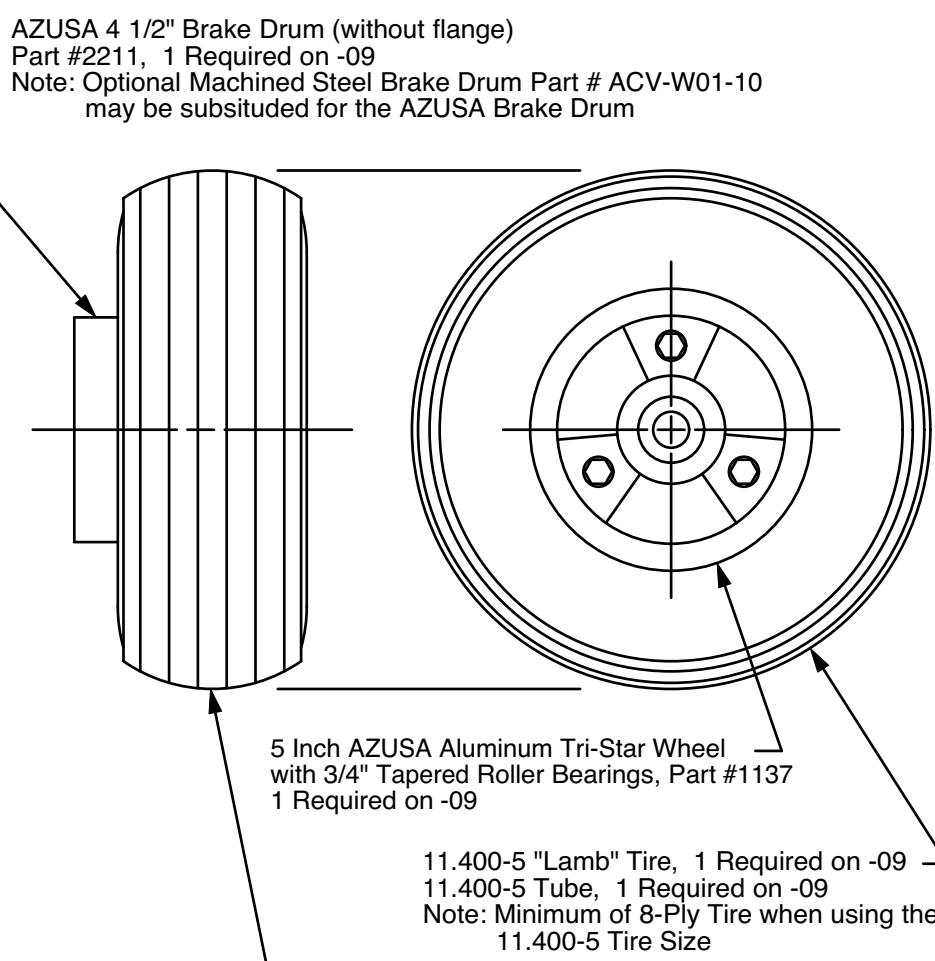







Detail of -09
Scale: 1/4

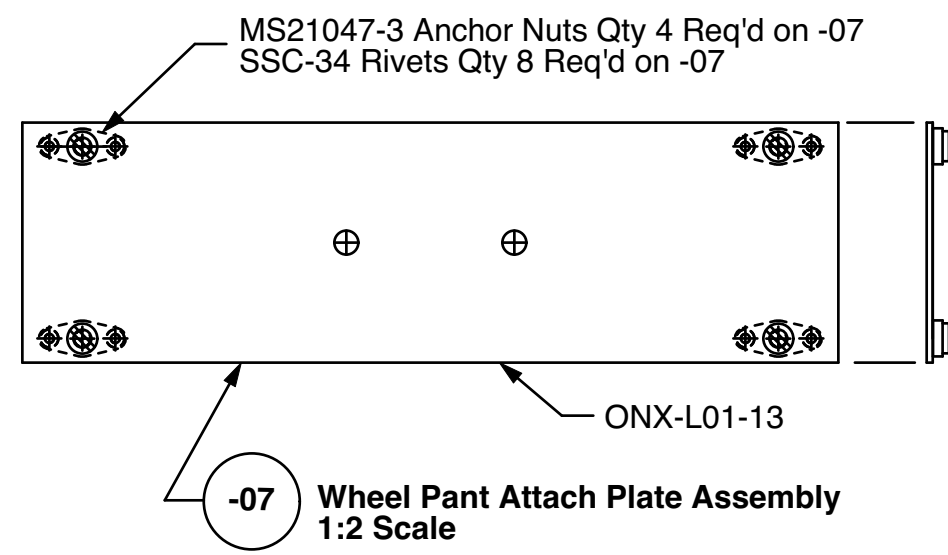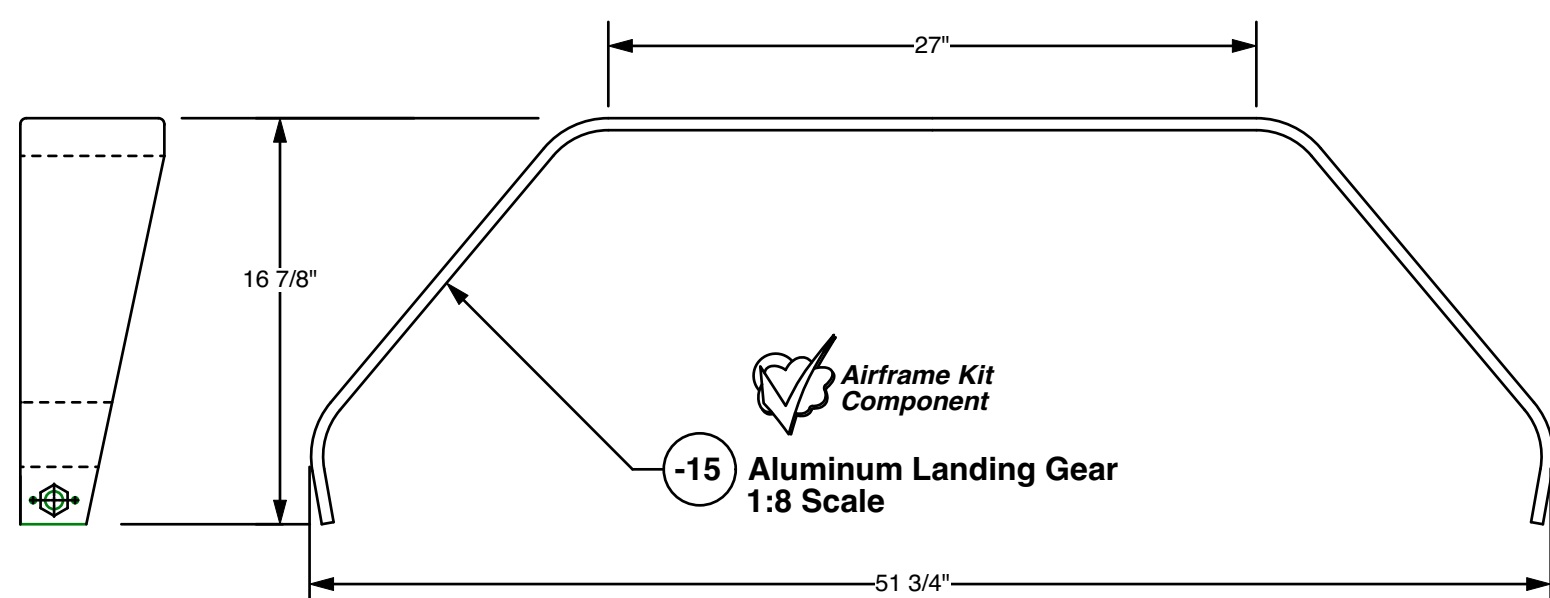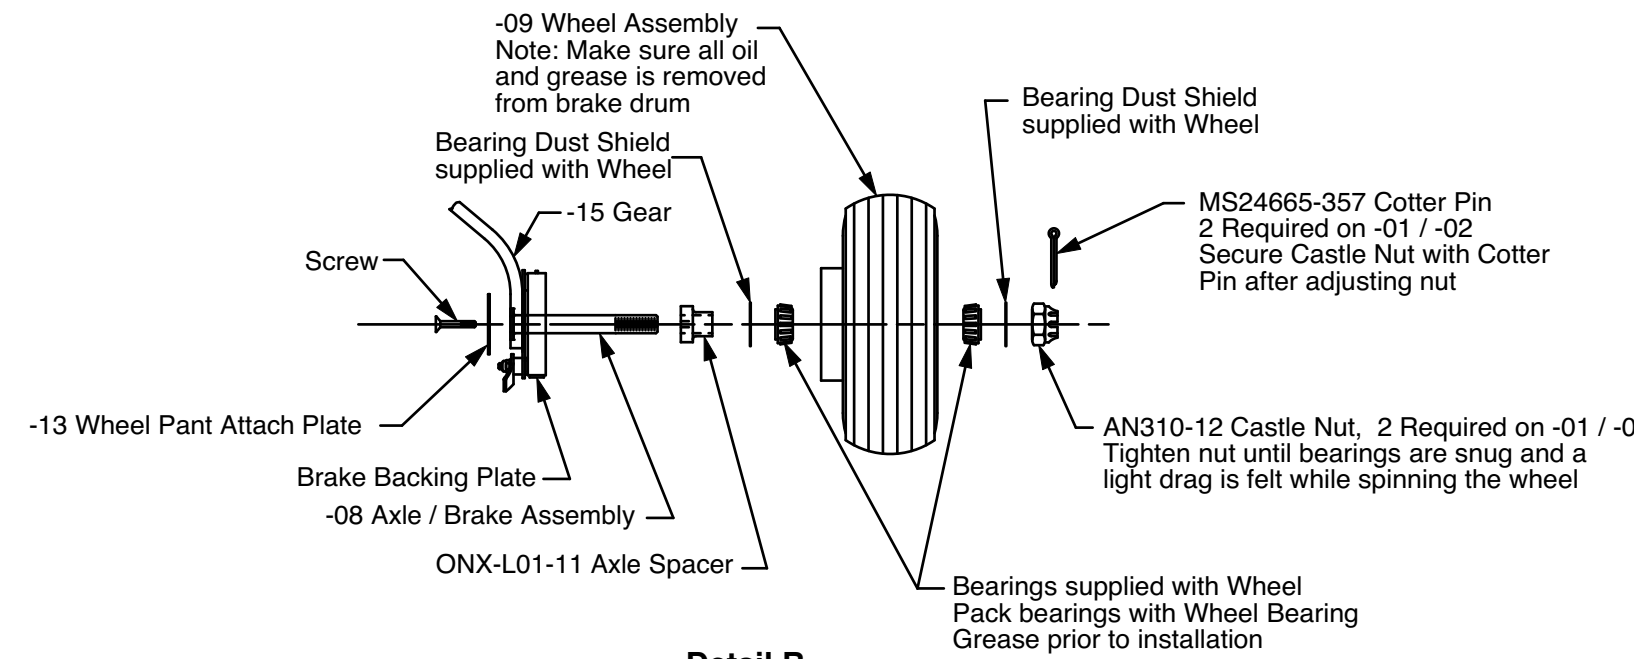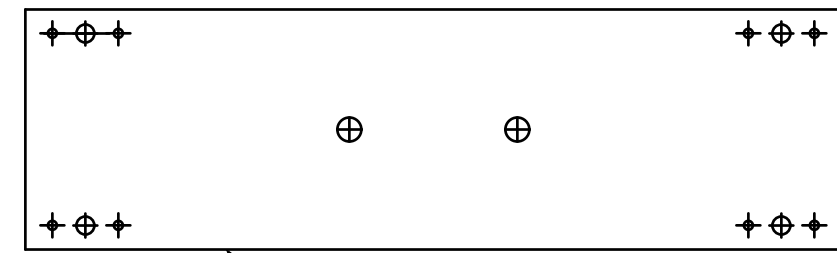

Detail K
Gear Attach Bolt Detail.
One Washer installed between Gear and Fuselage Floor.
Scale 1:2

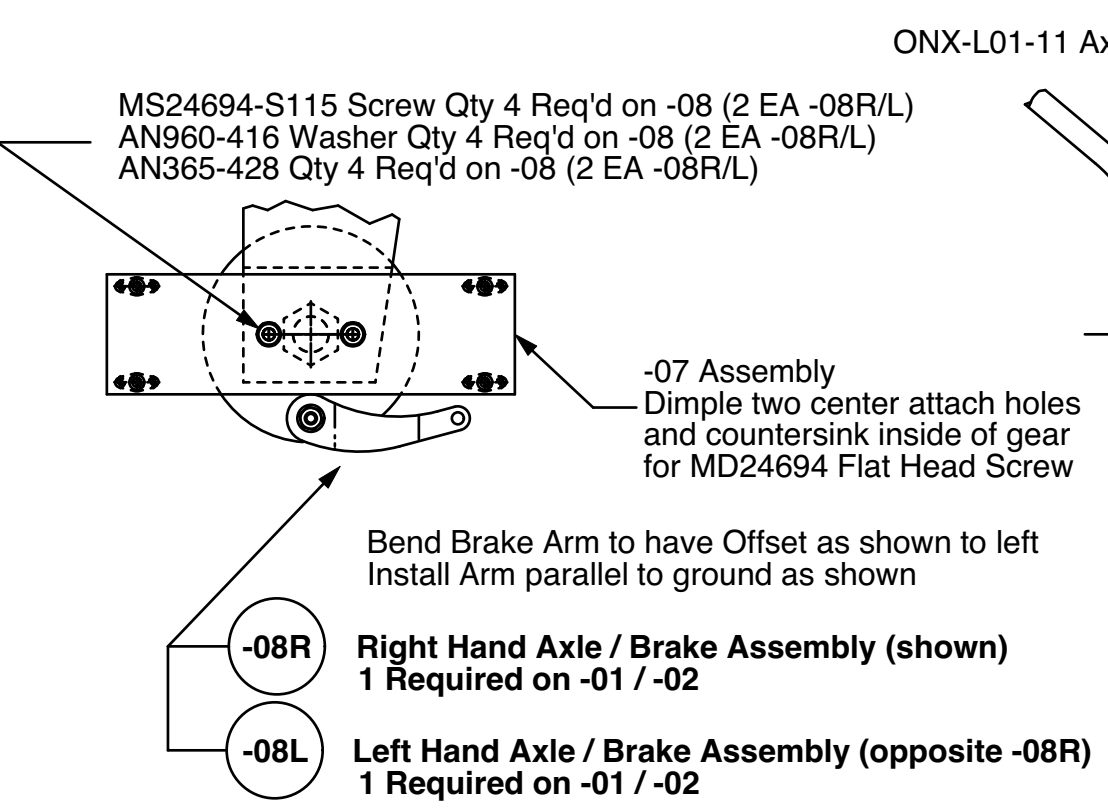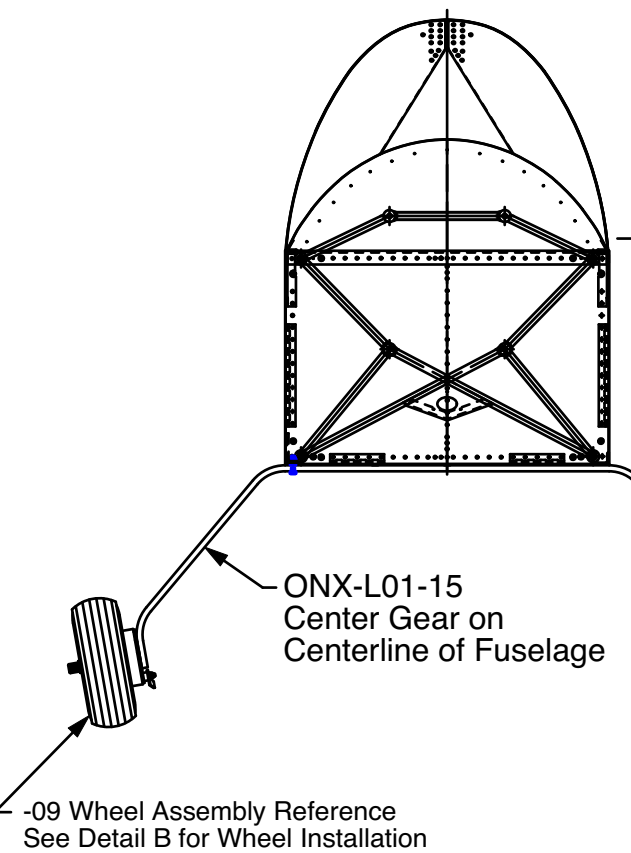
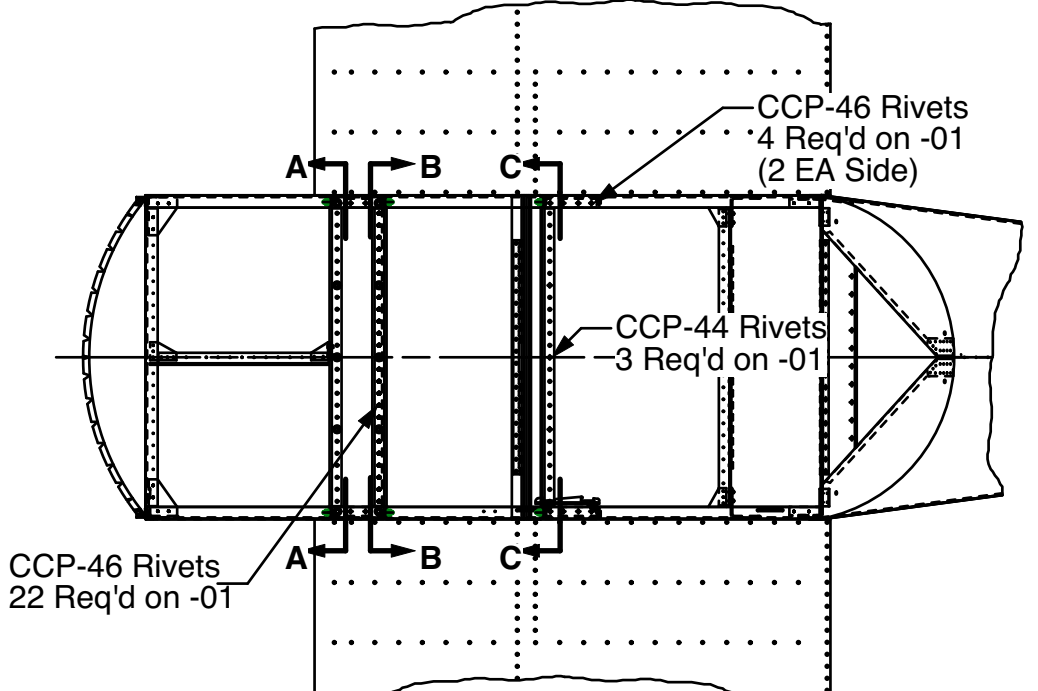
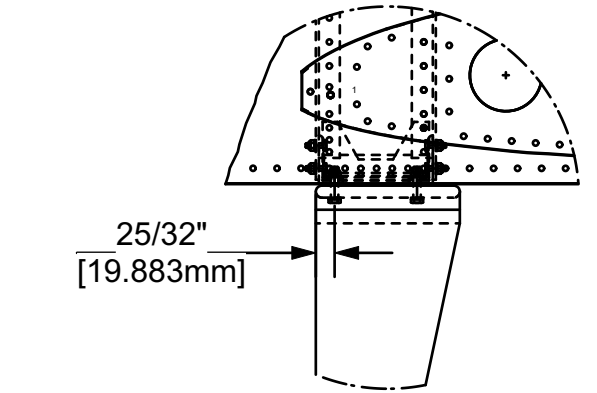


Detail of -08R Axle / Brake Assembly
Scale: 1/4

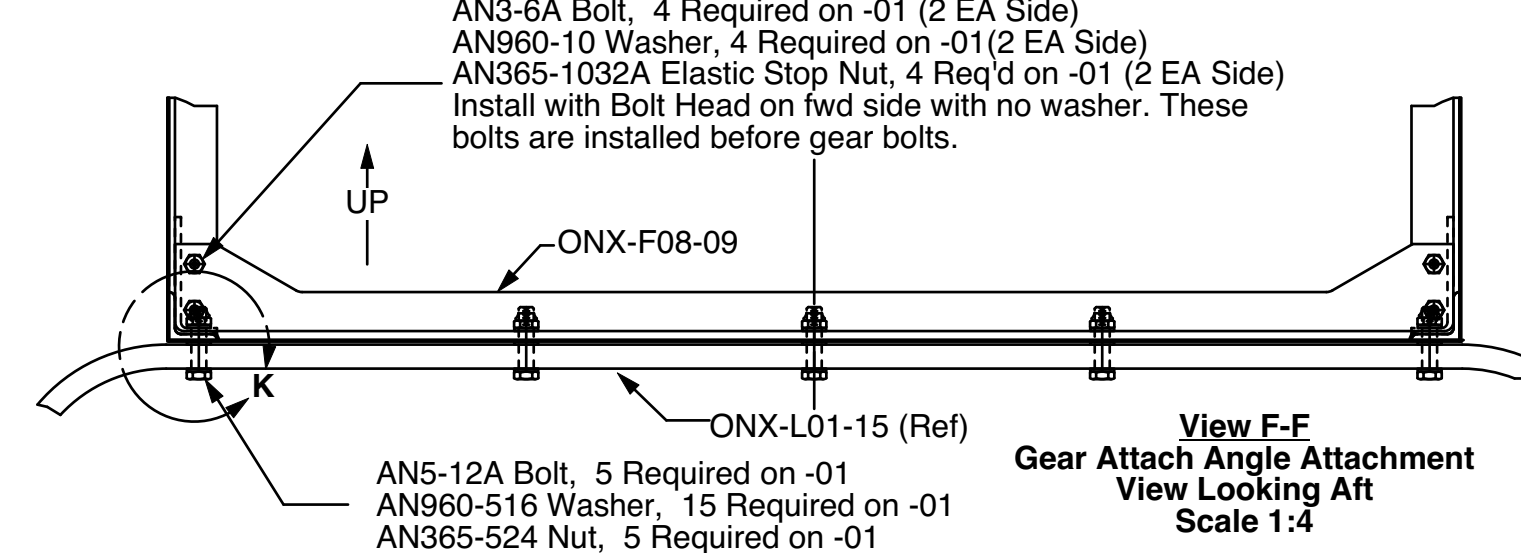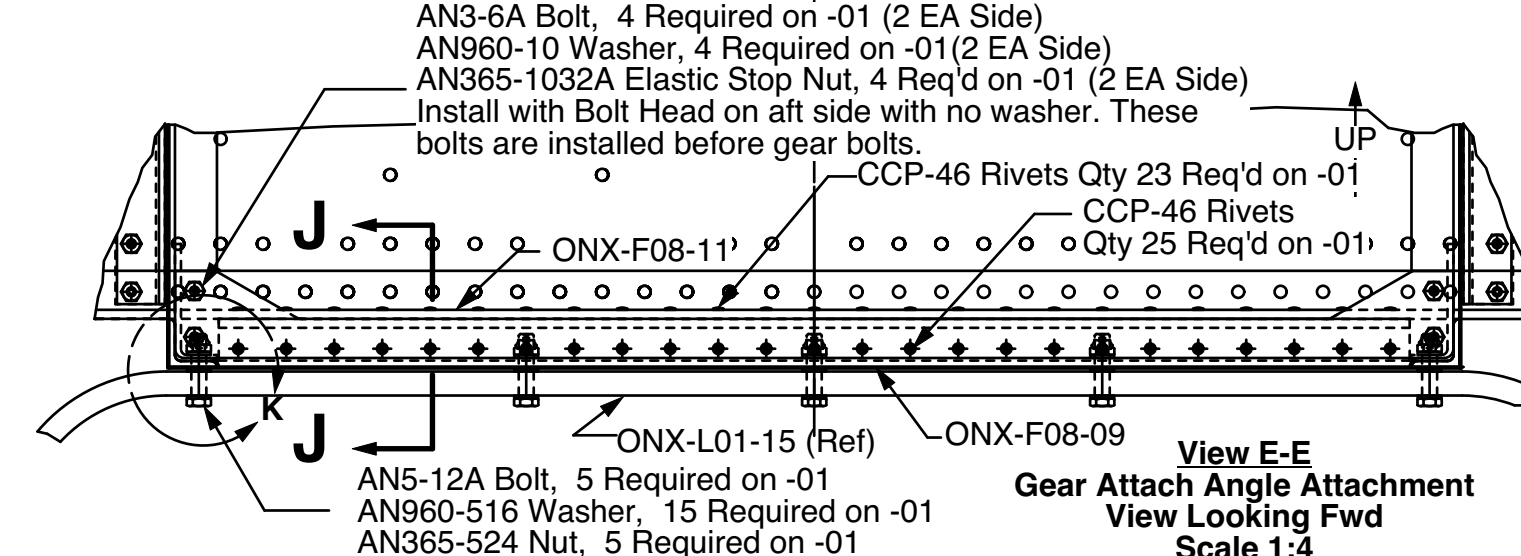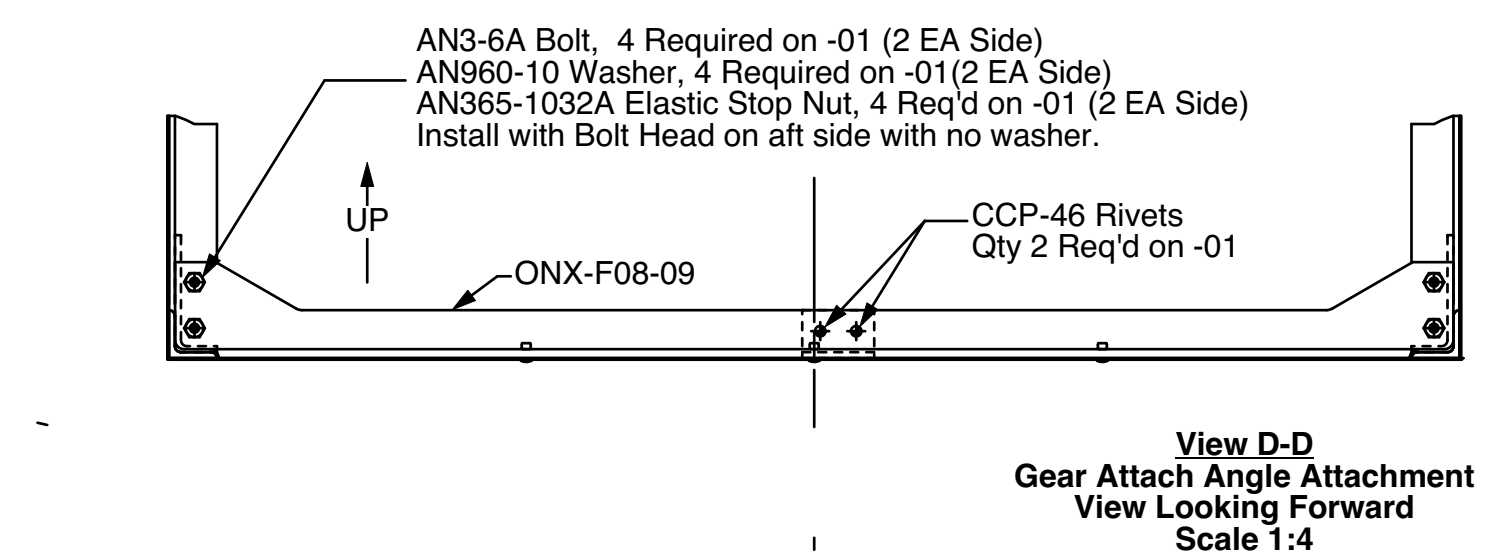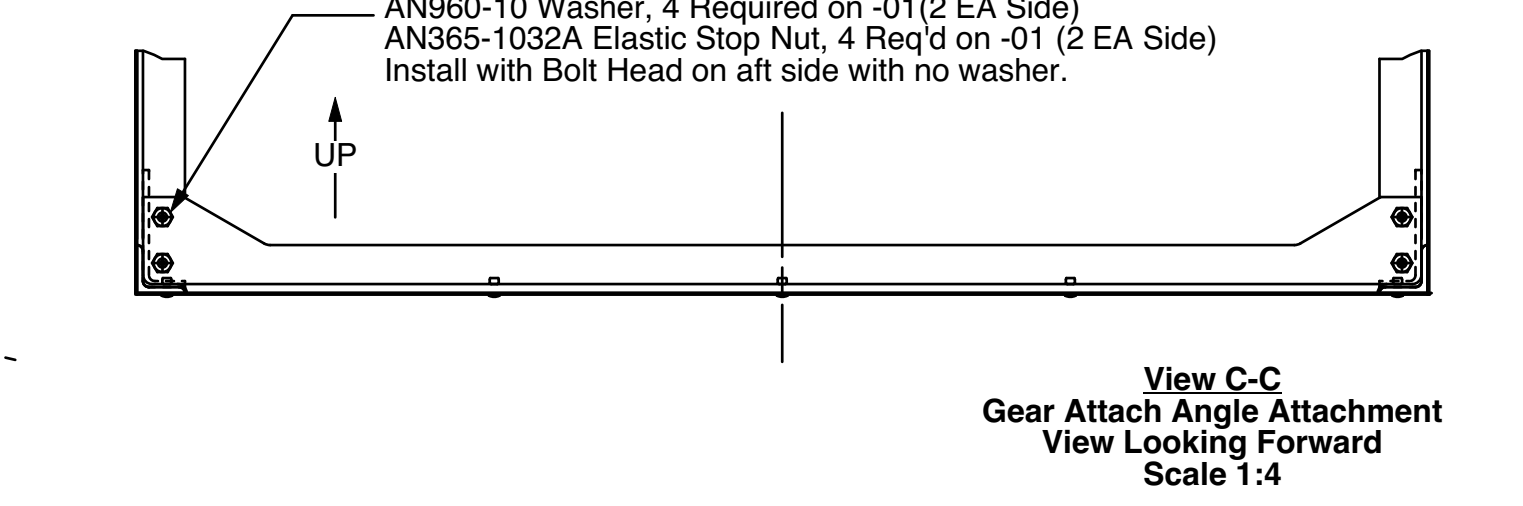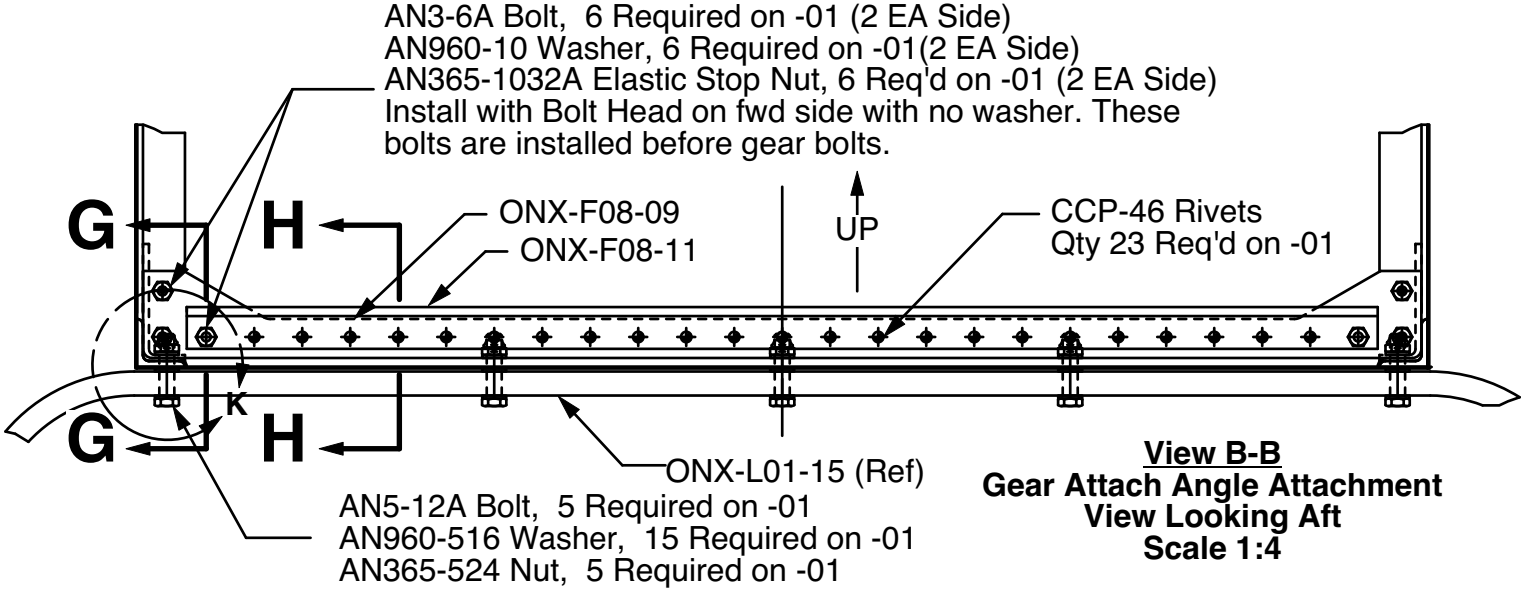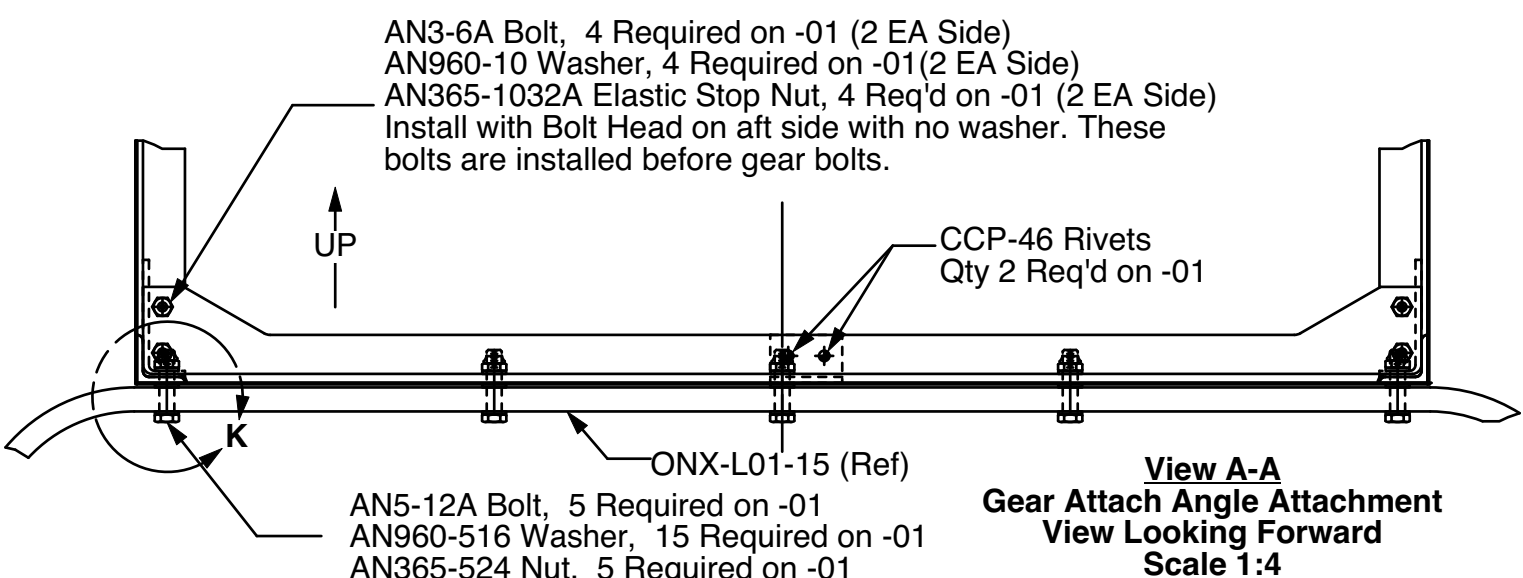

The information disclosed herein is the property of the originator who reserves all patent, design, proprietary, manufacturing, use and sales rights thereto, except for the rights expressly granted to others. This document shall not be reproduced nor shall the information contained within be used by or disclosed to others except as expressly authorized by the originator.

Revision Letter	Change Description	
A	Drill -09 Brake Cable Guide mount holes with #29 Drill for 8-32 thread. (was: #19) Added Call-out for ONX-F08-09 on View B-B.	1.9.12
B	Details -01 and -02: Delete CCP-46 Rivets Qty 4 Req'd on -01 and -02. This call out is redundant with these rivets installed on ONX-F09 Detail -02: Moved CCP-46 Rivets Qty 23 Req'd from Detail -02 to View E-E. Spacing of these rivets attaching ONX-F08-11 to bottom of main spar have the same spacing as the rivets attaching ONX-F08-11 to ONX-F08-09. General Construction Order: Tri-Gear (-02 Installation) Deleted Step 6 (redundant to Step 3) Install ONX-F08-11.	3.7.12
C	View E-E: CCP-46 Rivets Qty 23 Req'd on -01 should be Qty 25 Req'd on -01	4.26.12
D	-09 Brake Cable Guide: Qty 1 Req'd on -01 should be Qty 2 Req'd on -01/-02, used on ONX-L04.	5.16.12
E	-12 Axle: Added note to up-drill 3/32" pilot hole to 5/32".	10.17.12
F	- Updated ONX-L01-10 Main Landing Gear to ONX-L01-15 - Added Detail C and Detail D.	08.18.25

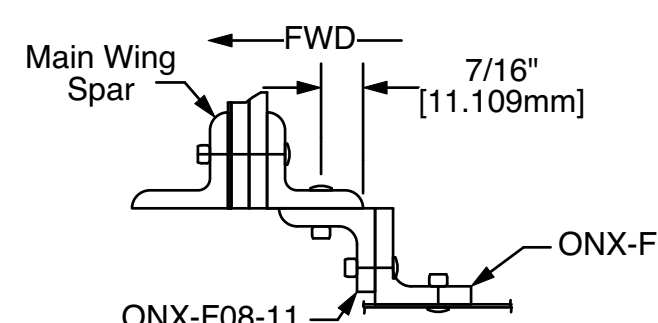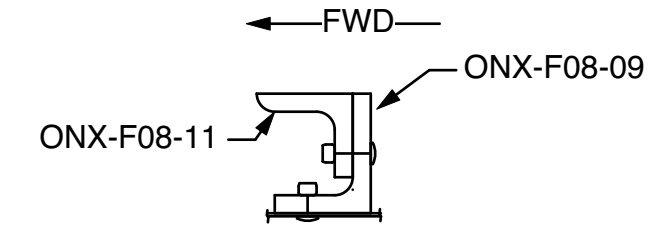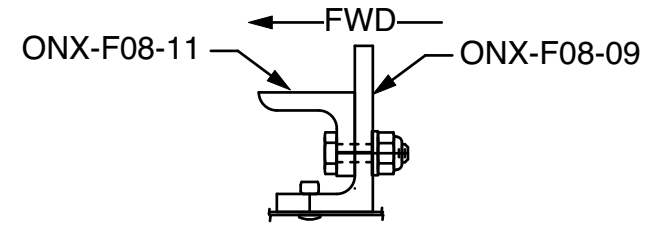

Note: General Construction Order

-08 Assembly

- 1) Ream main axle holes in landing gear to 0.740". A tight fit between the axle and landing gear is required. Axle bolts may be placed in the freezer to ease installation.
 - 2) Install axles per -08R/L and Detail B.
- Note: Wheels may be installed now or after the landing gear is attached to the fuselage.

Landing Gear Installation- Standard Gear (-01 Installation)

- 1) Install fasteners identified in View C-C
- 2) Install the AN hardware which secures the ONX-F08-09 to ONX-F08-11 to the fuselage verticals. See View A-A and B-B.
- 3) Position the landing gear centered laterally on the fuselage and aligned with the fuselage's longitudinal axis, and per Detail C.
- 4) Drill holes in the landing gear using the 10 pilot holes in the ONX-F08-09 Gear Attach Angles as guides. See View A-A and B-B.
- 5) Install ONX-F08-11 Main Gear Stiffener. See View B-B and Sections G-G and H-H.
- 6) Install Gear Attach Bolts in View A-A and B-B.
- 7) Assure all hardware associated with -01 Std Gear Main Installation has been installed.
- 8) Install the Brakes and Wheels.

Landing Gear Installation- Tri-Gear (-02 Installation)

- 1) Install fasteners identified in View D-D
- 2) Install the AN hardware which secures the ONX-F08-09 to the fuselage verticals. See View E-E and F-F.
- 3) Install ONX-F08-11 attaching it to the main spar and ONX-F08-09. See View E-E and Section J-J.
- 4) Position the landing gear centered laterally on the fuselage and aligned with the fuselage's longitudinal axis, and per Detail D.
- 5) Drill holes in the landing gear using the 10 pilot holes in the ONX-F08-09 Gear Attach Angles as guides. See View E-E and F-F.
- 6) Install Gear Attach Bolts in View E-E and F-F.
- 7) Assure all hardware associated with -02 Tri Gear Main Installation has been installed.
- 8) Install the Brakes and Wheels.

*-01 Required for Standard Gear Version
*-02 Required for Tri-Gear Version

-02	1"	Tri-Gear Main Gear Installation	ONX-F03
-01	1"	Std Gear Main Gear Installation	ONX-F03
Dash / Part Number	Qty Req'd	Part Title	Next Assembly

onex
Main Landing Gear
Details & Installation

Drawing Scale	Drawing Number	Revision
1/16 & Noted	ONX-L01	F