


**-07**

**Rudder Attach Hinge Pin  
1 Required on -02**

**Make from Pin from MS20257P3 Piano Hinge  
Scale 1:2**

AN4-10A Bolt, 2 Required  
AN960-416 Washer, 4 Re  
AN365-428 Nut, 2 Requir  
Locate per pilot holes in H  
and Fuselage Longerons.  
Note: Clamp stack tightly t  
when drilling to avoid bur  
forming between parts whi

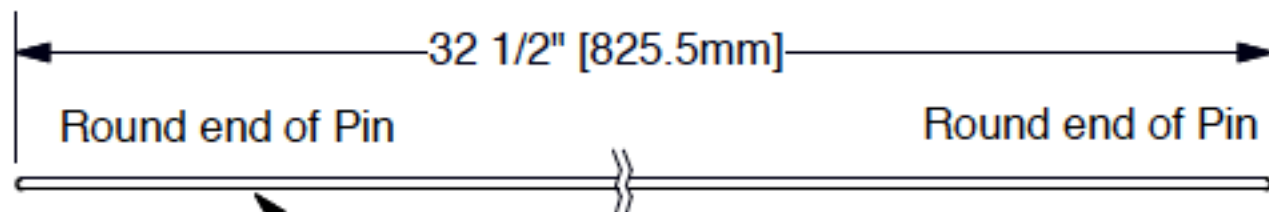

**-06**

**Elevator Attach Hinge Pin  
2 Required on -01**

**Make from Pin from MS20257P3 Piano Hinge  
Scale 1:2**